Thank you for purchasing the HD Digital Photo Viewer by Delkin Devices. The Digital Photo Viewer is an ideal companion to game cameras, compact digital cameras, camcorders and other imaging devices that lets you easily view and share photos and video on any television set in full 1080 HD quality. Be sure to read these instructions thoroughly before enjoying your HD Digital Photo Viewer.

OVERVIEW: TOP PANEL

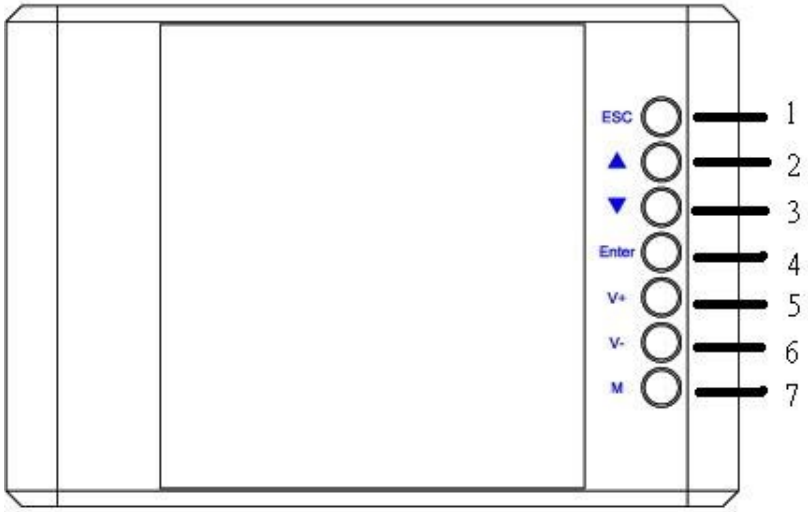

Button	Marking	Function
1	ESC / PWR	Escape / To power on press for 3 seconds, to power off press for 8 seconds
2	▲	Move up / Fast forward
3	▼	Move down / Rewind
4	Enter	Enter / Play / Pause
5	V +	Volume up
6	V -	Volume down
7	M	Menu / Pressing for 3 seconds will return player to default settings

OVERVIEW: FRONT PANEL

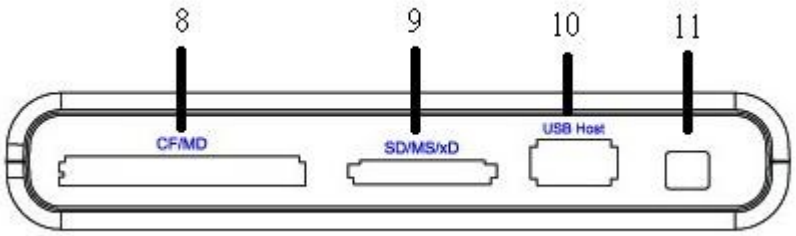

8	**CF / MD**	**Compact Flash, Micro Drive Reader**
9	**SD / MS /xD**	**SD, SDHC, MS, xD Reader**
10	**USB**	**USB Reader**
11	**IR**	**IR Remote Receiver**

OVERVIEW: BACK PANEL

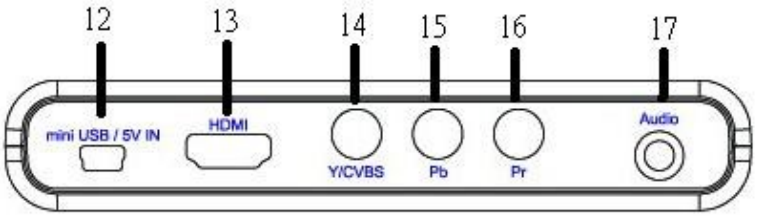

12	**Mini USB**	**Mini USB to connect to power supply or PC**
13	**HDMI**	**HDMI connector**
14	**Y / CVBS**	**Y / CVBS (PAL/NTSC) jack**
15	**Pb**	**Pb jack**
16	**Pr**	**Pr jack**
17	**Audio**	**3.5mm phone jack**

OVERVIEW: REMOTE CONTROL

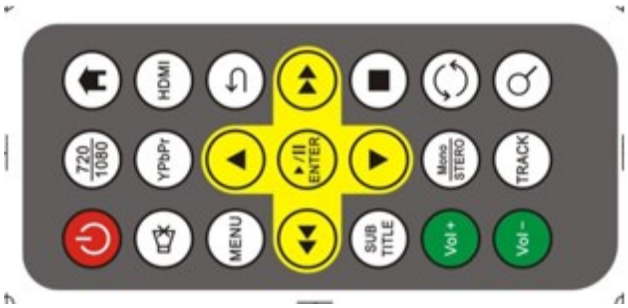

	Power On/Off	720 1080	Change Resolution		Access Main Page
	Mute	YPbPr	Y, Pb, Pr Mode	HDMI	HDMI Mode
MENU	Menu		Up		Back
	Left/Rewind/ Slide Show Off	▶/II ENTER	Enter/Play/ Pause/Zoom Out		Right/Fast Forward/ Slide Show On
SUB TITLE	Sub Title		Down		Stop
Vol +	Volume Up	Mono STERO	Stereo/Left Channel/ Right Channel		Rotate
Vol -	Volume Down	TRACK	Change Track		Zoom In

Connecting your HD Digital Photo Viewer to your TV

1. Connect the HD Digital Photo Viewer to an HDMI, Component (Y,Pb,Pr /CVBS) or RCA input on your TV. (Component & RCA cables not included). * If connecting via RCA

input, plug the green component cable into the yellow RCA input on your television – do not utilize the other cables.

2. Connect the AC power supply to the HD Digital Photo Viewer using the supplied USB cable. Insert the large end of the cable into the power supply and the small end of the cable into the Mini USB input (12) of the HD Digital Photo Viewer.
3. Select the correct input source on your TV that corresponds to the input you have connected to the HD Digital Photo Viewer.
4. Turn your HD Digital Photo Viewer on. The viewer will automatically detect the correct interface.
5. Insert your memory card or USB flash drive into the corresponding memory card slot to play movies or photos.
6. Access all functions and menu options from either the remote control or the HD Digital Photo Viewer control panel.
7. Use the power button on the remote control to toggle between sleep mode or active mode.
8. To power off, press the ESC button on the control panel for at least 8 seconds.

Important Notes:

- The power button on the remote only puts the HD Digital Photo Viewer into the sleep mode and does not turn the power on or off
- Only one memory card or flash drive can be accessed at a time
- The USB host only provides 500mA power and is not recommended for charging and powering other devices

Operating your HD Digital Photo Viewer

MOVIE MODE

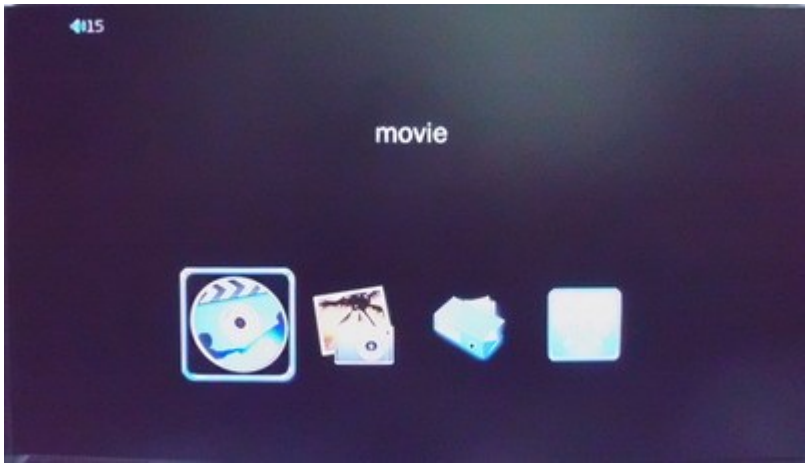

To choose a movie:

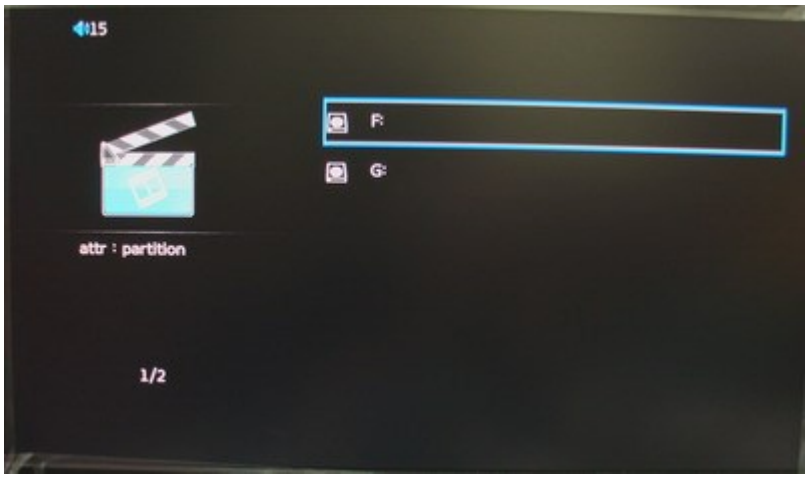

First choose the source folder:

Press MENU in the play list to call the file toolbar:

1. Return to the desktop
2. File Sort□ A->Z,Z->A
3. File Operations□
    1. Copy
    2. Paste
    3. Delete
    4. Cancel

A list of files will be displayed:

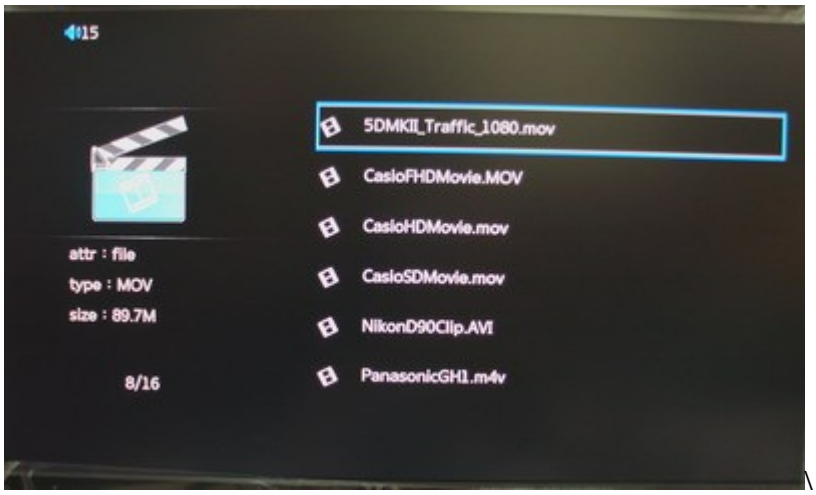

Choose the file you wish to view

Press the MENU button in movie play mode to display the playback toolbar

Use Left/Right button to choose the function. Press enter to confirm.

1. Return to File Manager
2. Track Selection
3. Subtitle Selection
4. Zoom Options

    A: Video full screen

    B: Screen full screen

    C: Default

D: 4:3

F: 16:9

E: Fit view

5. Play Mode

A: Only once

B: Rotate one

C: Rotate all

D: Sequence

F: Random

6. Channel Selection

1. Stereo
2. Left channel
3. Right channel

7. Subtitle Size

1. Subtitle size: small
2. Subtitle size: medium
3. Subtitle size: large

8. Subtitle Color

1. Default
2. Red
3. Blue

PICTURE MODE

Choose the picture mode:

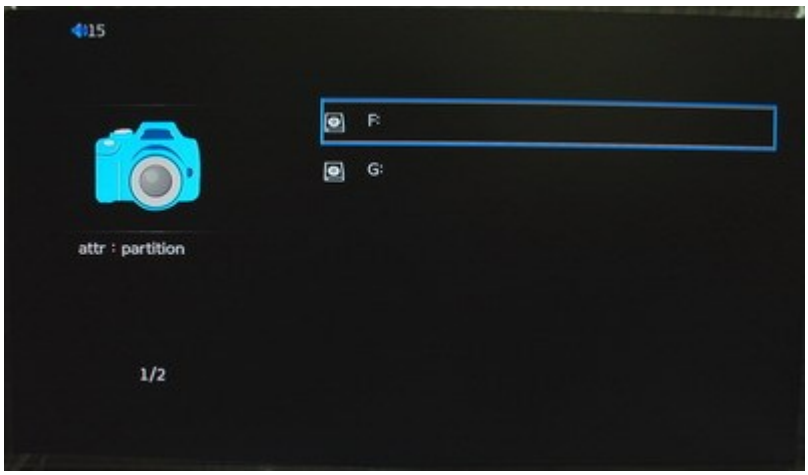

Choose the source folder:

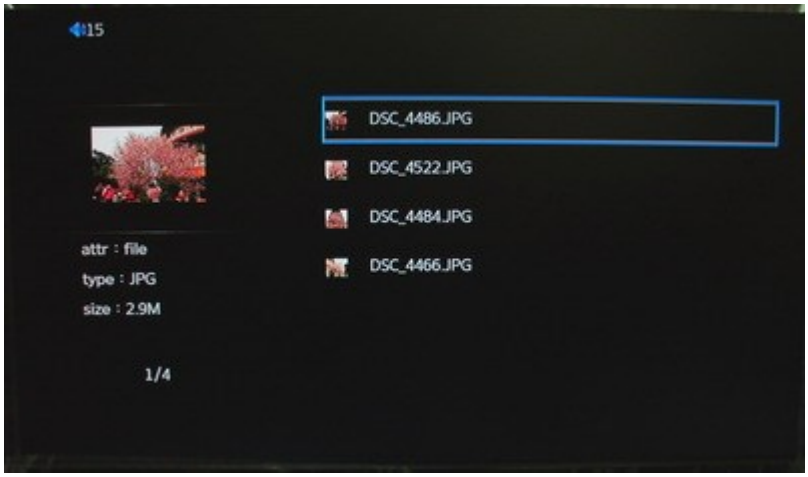

Choose the file you wish to view:

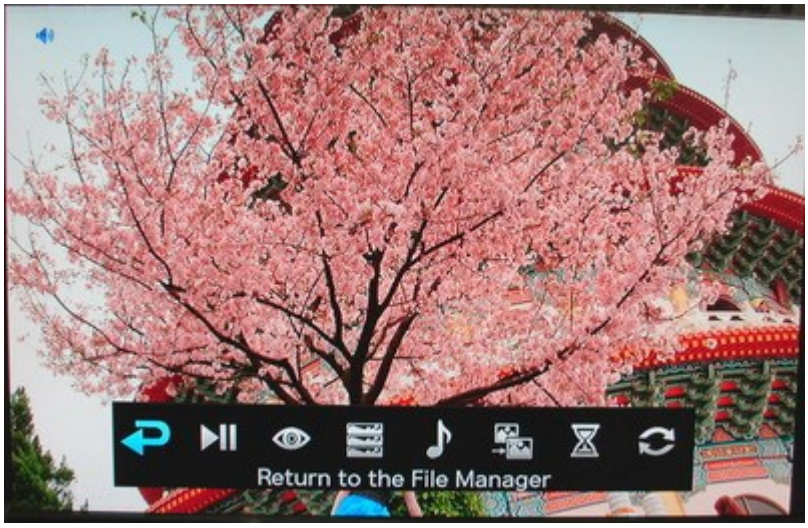

Press the MENU button in picture play mode to display the picture toolbar.

Use the Left/Right button to choose the option, then press enter to confirm.

1. Return to the File Manager

2. Auto play

3. Operation

   Zoom in

   Zoom out

Rotate Counter Clockwise

Rotate Clockwise

Scroll Up

Scroll Down

Scroll Right

Scroll Left

4. Browse

5. Music

6. Slide Show Transition mode

   Default

   Random

   Mosaic

7. Slide Show Time Interval

   3s

   5s

   10s

   20s

8. Slide Show Sequence

   Next photo

   Previous photo

   Random photos

BROWSER

Choose the browser:

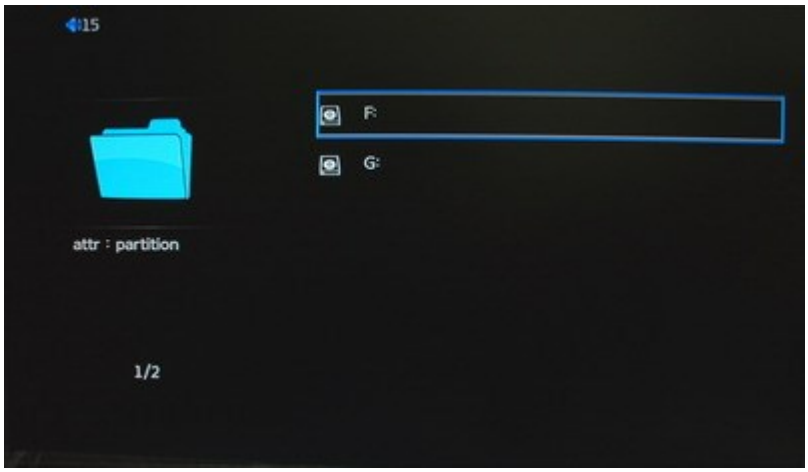

Choose the source folder:

If there is an incompatible file, then the icon will be displayed

Important Note:

The HD Digital Photo Viewer firmware can be upgraded in the browser mode.

SETTING MODE

Choose Your Viewing Mode

1. Output Type
    1. PAL
    2. NTSC
    3. 480P
    4. 720P (50HZ)
    5. 720P (60HZ)
    6.1080P (50HZ)
    7. 1080P (60HZ)
    8. HDMI-480I
    9. HDMI-480P
    10. HDMI-576I
    11. HDMI-576P
    12. HDMI-720P (50HZ)
    13. HDMI-720P (60HZ)
    14. HDMI-1080I (50HZ)
    15. HDMI-1080I (60HZ)
    16. HDMI-1080P (24HZ)
    17. HDMI-1080P (50HZ)
    18. HDMI-1080P (60HZ)

Choose Your Language

1. S-Chinese
2. T-Chinese
3. English
4. Japanese

Choose Your Key Tone

1. On
2. Off

System Information (firmware version)

Restore Factory Defaults

Trouble Shooting

1. No Signal to the TV

- Check the power and make sure the power supply indicator is lit
- Make sure the cable(s) are connected correctly
- Make sure the TV is set to the correct input source

2. No Sound

HDMI mode

- Make sure the TV is set to HDMI audio
- Make sure the speaker is working
- Check to make sure the mute button is not pressed

Y,Pb,Pr / CVBS mode

- Make sure the audio cable is connected to the 3.5mm phone jack
- Check that the TV audio in jack is connected
- Make sure the speaker is working
- Check to make sure the mute button is not pressed

3. Remote Control does not work

- Check the battery and replace if necessary

4. Reset the unit to factory default settings

- Press M button for 3 seconds, wait for the device to reboot

5. Unit will not power off

- Sleep mode is only possible when using the remote control. If you want to power off the device, press the control panel ESC button for 8 seconds

6. Cannot see files on card

- The unit supports one memory card at one time. Be sure that only one card is inserted

7. Cannot charge another device from the USB port

- The USB Host only provides 500mA power

SPECIFICATIONS

Specification	Model Number	DDHDTV-VIEW
	I/O	CF, (SD/SDHC, MS, XD) Slots
		USB 1.1 / 2.0
		Mini USB (power)
		IR Receiver
	Language	English, T-Chinese, S-Chinese, Japanese
Interface	Video Out	CVBS
		Y P Br
		HDMI
	Audio Out	3.5mm Phone jack
Resolution	HDMI	480P, 576P, 720P, 1080P
	Y P Br	480P, 576P, 720P, 1080P
	CVBS	NTSC, PAL
Playback	Video Format	AVI, MPG, WMV, MOV, MTS
	Photo Format	JPG, BMP
Power	Power Input	AC to DC USB Type 5V/1A
	Power Consumption	Working:650mA Standby:400mA
Size	Dimensions	26mm x 138mm x 95mm
	Weight	145g
Included		HDTV Viewer, power cord, HDMI cable, remote control, user manual
Memory Card	CF	1 TB

	SD / SDHC	2 TB
	XD	4 GB
	MS PRO	32 GB
HDMI Version		V 1.2
Firmware Upgrade		By memory card

DELKIN DEVICES®

13350 Kirkham Way Poway, CA 92064. All: 858.391.1234 Toll Free: 800.637.8087
EU: +44(0)1922.636.250 © Delkin Devices, Inc. All Rights Reserved. Delkin Devices logos and trademarks are property of Delkin Devices, Inc. All other logos and brand names are trademarks of their respective owner. PAK MAN DDHDTV-VIEW
1 YEAR WARRANTY FROM DATE OF SALE, PROOF OF PURCHASE REQUIRED.